

STEP BY STEP FOR LINE STRIPING

Step-By-Step Instructions

1 | Before you start

Fully read the Technical Data Sheet and Material Safety Data Sheet before you begin.

2 | Surface preparation

Remove loose debris and contaminants by sweeping the surface before application of the coating. Grease, oil and chemical contaminants are best removed by washing the surface with Pure Strength[®] Cleaner/Degreaser, item #3599402, commercial detergent, or other suitable cleaner. Rinse thoroughly with clean fresh water and allow to fully dry. To help ensure straight and parallel lines, it is suggested that you snap a chalk line to be used as a guide before you begin application.

3 | Application


Use when temperature is above 32°F (0°C) and humidity is below 85% to ensure proper drying. The Inverted Striping sprays are designed for use with Rust-Oleum Striping Machine.

Shake can for one minute after mixing ball is heard. Insert the aerosol into the holder on the Striping Machine and be sure the 'T' shape of the nozzle is parallel to the wheel axle of the Striping Machine. Adjust the position of the can holder on the Striping Machine for the desire strip width. There is a guide on the machine. The width of the stripe can be varied from 2-4 inches wide. For best results be sure the Striping Machine is in motion before squeezing the trigger and release the trigger before stopping. If clogging occurs, carefully remove spray tip and clean in thinner.

If the application is outdoors, be sure to protect surrounding surfaces from overspray.



BEFORE

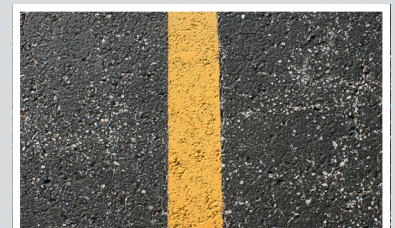

AFTER

What You'll Need

- ✓ Work gloves
- ✓ Safety glasses
- ✓ Rust-Oleum High Performance Striping Paint
- ✓ Scrub brush and suitable cleaner such as Rust-Oleum 3599 Cleaner/Degreaser
- ✓ Rust-Oleum Striping Machine, #2395000 for floors or pavement
- ✓ Chalk line (optional)